

# Covid-19 - Sanitary Guideline Paexo Shoulder

**General Handling Guideline**  
Sanitary Recommendation

**Disinfection of Paexo Shoulder**  
Step-by-Step Instructions

**Hygiene Safety Measures  
during exoskeleton fittings**  
We've got your back




# Paexo Shoulder

General sanitary handling guidelines



We recommend a **twice daily disinfection** cycle – optimally at beginning and end of shift, or beginning of a fitting or maintenance process

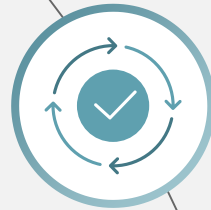

**Do not share** devices in between disinfection cycle



**During disinfection** process **handle with gloves only**



**Ensure safe and closed storage** of devices and prevent other people from touching

# How to disinfect Paexo Shoulder



**Always remove padding before disinfection (arm pads, hip belt)** – either disinfect and hand wash padding or exchange with personal padding set



All **metal, polymeric and textile parts** (e.g. straps) can be thoroughly cleaned with either **disinfection wipes** or **disinfection spray** or **applying disinfectant to a lint-free cloth.**



The **internal expander unit shall not be in direct contact with disinfectant** to avoid deterioration – the textile cover and **visible expander** part can be wiped



Let **disinfectant dry completely (minimum 30 seconds)** before use. Always use disposable gloves during disinfection process and wash hands afterwards.

Also see Ottobock's "Paexo Care" Maintenance Service for professional cleaning in our sanitation chamber





## Hygiene safety measures during a Paexo fitting process



1. Wear a **facial mask** covering nose and mouth and **optionally gloves**



2. **Use hand-disinfectant** each time **before** and **after** touching a Paexo system put on by a user



3. Limit **personal (body) contact** to a necessary **minimum** and maintain **minimum distance of 1.5 m** whenever possible



4. Ask **user** to **adjust** as much as possible by **herself / himself**

ottobock.

**Ottobock Industrials**  
Ottobock SE & Co. KGaA

[industrials@ottobock.de](mailto:industrials@ottobock.de)  
+49 5527/848 1482



[linkedin.com/showcase/Ottobock-Industrials](https://www.linkedin.com/showcase/Ottobock-Industrials)



[twitter.com/Ottobock\\_Paexo](https://twitter.com/Ottobock_Paexo)



[facebook.com/pg/Paexo](https://facebook.com/pg/Paexo)



[paexo.com](https://paexo.com)



Stay safe!